



RUBIFIN N°3

Liquid product, used to rinse and dry watch movements in after-sales service machine.

COMPATIBILITY:

- All metals

INGREDIENTS:

- Solvents


PHYSICAL AND CHEMICAL DATA:

- pH concentrated: n.m.
- Density: 0.807
- Flash point: 34°C
- Surface tension: 27.3 mN/m

INSTRUCTIONS FOR USE:

- Concentration: 100%
- Temperature: 20°C (68°F)
- Time: 5 to 10 minutes

PROCESS EXAMPLE:

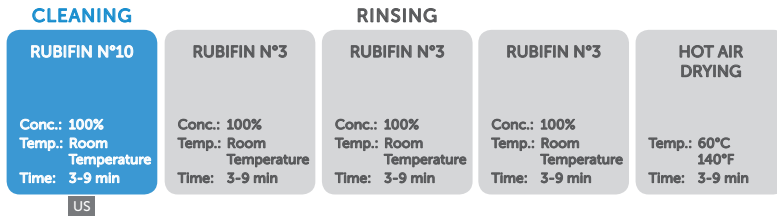

US

Using RUBIFIN N°3 is recommended under ventilation or an aspiration system

BENEFITS:

- Perfect rinsing and drying of watch movements
- No oxidation of metals, including aluminium
- Spot free finish

28/11/17

STORAGE CONDITIONS:

- Keep the recipient hermetically sealed between 5°C and 40°C (41°F and 104°F) in a dry place.
- Always keep in packaging made from the same material as the original packaging.



If you have any questions, please contact our Application Centre on: +41 22 365 46 66

