



# CERALTIN 211

Alkaline liquid product for the decoating of aluminium and chromium based coatings.



## CUTTING TOOLS RANGE

### COMPATIBILITY

- Substrates:
  - Carbide
  - Cermet
- Coatings:
  - AlCrN
  - AlTiN


### PHYSICOCHEMICAL DATA

- pH concentrated: 14
- Density: 1.43
- Appearance: colorless/pink

### INSTRUCTIONS FOR USE

- Ceraltin 211 is ready to use and must be used at 100% concentration
- Temperature: 130-140°C (266-284°F)
- Kinetic reactions: minimum 4h depending on the nature of the coating
- The bath must be placed under a hood or in a machine equipped with an air extractor

### DECOATING PROCESS

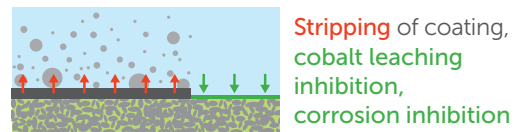

Parameters for decoating:



10/07/23

### PROCESS EXAMPLE

#### DECOATING

<b>CERALTIN 211</b> Conc.: 100% Temp.: 130-140°C Time: 4h to 10d	<b>TAP WATER RINSE</b> Temp.: 20-30°C 68-86°F Time: 2-3 min	<b>VACUKLEEN 2018</b> RO or DI water Conc.: 3-5% Temp.: 40-70°C 104-158°F Time: 2-4 min	<b>DI WATER RINSE</b> Temp.: 30-40°C 86-104°F Time: 2-3 min	<b>DRYING</b>
---	--	--	--	---------------

US

### STORAGE CONDITIONS

- Keep hermetically sealed
- Keep the container between 5°C and 40°C (41 and 104°F) in a dry place
- Always keep in packaging made from the same material as the original packaging (HDPE)



For any other decoating operation; please contact NGL Cleaning GmbH which can offer you the services of its top of the art decoating facility

**NGL CLEANING GmbH - CHEMICAL & DECOATING TECHNOLOGY**

Schlavenhorst 15 – DE-46395 BOCHOLT – GERMANY  
+49 2871 27 411-40 – kontakt@ngl-group.com – ngl-group.com



MADE IN GERMANY





## MATRIX COATING / SUBSTRATE / COATING THICKNESS / TIME:

SUBSTRATES	COATINGS							
	TiCN	TiN, TiAlN, AlTiN	TiSiN, TiSiAlN	ZrN, ZrCN	AlCrN, AlCrSiN	DLC: Cr, CrN adhesion layer	DLC ta-C/ DLC a-C/ DLC a-C:H	CrN
CARBIDE	U308	U308	U308	U308	C211	x	x	x
Time	1-2µ 18-24h / 2-3µ 48-72h / 3-5µ 3-6d	1-2µ 8-24h / 2-3µ 24-48h / 3-5µ 24-72h	1-2µ 8-24h / 2-3µ 24-48h / 3-5µ 24-72h	1-10h	1-2µ 24-72h / 2-3µ 48h-5d / 3-5µ 3-10d	-	-	-
HSSE (with cobalt in the alloy)	U308	U308	U308	U308	E222, possible cobalt leaching	E222, possible cobalt leaching	y	E222, possible cobalt leaching
Time	1-2µ 18-24h / 2-3µ 48-72h / 3-5µ 3-6d	1-2µ 8-24h / 2-3µ 24-48h / 3-5µ 24-72h	1-2µ 8-24h / 2-3µ 24-48h / 3-5µ 24-72h	1-10h	45-180 min	45 min-48h	-	20-120 min
HSS	F56	F56	F56	U308	E222	E222	y	E222
Time	3-6h	1-3h	1-3h	1-10h	20-120 min	45 min-48h	-	20-120 min
HSS (without cobalt in the alloy)	F56	F56	F56	U308	E222	E222	y	E222
Time	3-6h	1-3h	1-3h	1-10h	20-120 min	45 min-48h	-	20-120 min
TOOL STEEL	F56	F56	F56	U308	E222	E222	y	E222
Time	3-6h	1-3h	1-3h	1-10h	20-120 min	45 min-48h	-	20-120 min
STAINLESS STEEL	F56	F56	F56	U308	E222	E222	y	E222
Time	3-6h	1-3h	1-3h	1-10h	20-120 min	45 min-48h	-	20-120 min
NICKEL-CHROMIUM-BASED SUBSTRATES	F56	F56	F56	U308	E222	E222	y	E222
Time	3-6h	1-3h	1-3h	1-10h	20-120 min	45 min-48h	-	20-120 min

x - no solution

y - no solution if no Cr/CrN adhesion layer available

The decoating matrix is a schematic abstract. Due to the high substrate/coating diversity the classification for compatibilities can't be generalized and must be confirmed by test before use.

### Decoating bath temperatures:

- U308: Uniceral 308 (80-90°C (68-86°F) / bath circulation required)
- F56: Ferrodec 56 (60-80°C (140-176°F) / usually 70°C (158°F)
- E222: Excarbonite 222 (40-70°C (104-158°F) / usually 55°C (131°F)/ bath circulation required
- C211: Ceraltin 211 (130-140°C (266-284°F)



For any other decoating operation; please contact NGL Cleaning GmbH which can offer you the services of its top of the art decoating facility.

