



HELIT FINISH 2026

Neutral universal detergent with a hydrophilic superfinish on the surface in ultrasonic processes prior to drying.



JEWELLERY RANGE

FUNCTION	APPLICATION/POLLUTION
Hydrophilic superfinish	Light pollutions

COMPATIBILITY

- Stainless steel
 - Lead-free brass
 - Silver: 800 - 925 (sterling)
 - Gold: white, pink, yellow
 - Platinum
 - Acetate
 - Rhodium, palladium
 - Stones*:
 - Diamond, sapphire, ruby
 - Zirconium, ceramic
- *Please contact NGL before implementing a process.

COMPONENTS

- Surfactants
- No NTA, phosphates, or DEA
- No CMR compounds, REACH compliant

PHYSICOCHEMICAL DATA

- pH concentrated: 8.8
- Density: 1.04

INSTRUCTIONS FOR USE*

- Concentration: 1 to 3%
- Temperature: 40 to 60°C (122 to 140°F)
- Time: 2 to 5 minutes

*Dependent on the quality of water and the nature and quantity of contaminants.

PROCESS EXAMPLES

- Removal of polishing compounds from jewellery set with less-sensitive gemstones

CLEANING

RODACLEAN 2018
Tap water
Conc.: 3-5%
Temp.: 40-70°C
104-158°F
Time: 3-5 min

US

TAP WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

FINISHING

HELIT FINISH 2026
Tap water
Conc.: 1-3%
Temp.: 40-60°C
104-140°F
Time: 2-3 min

US

TAP WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

DI WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

DI WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

HOT AIR DRYING

- Removal of polishing compounds from jewellery set with sensitive gemstones

CLEANING

HELIT FINISH 2026
Tap water
Conc.: 1-3%
Temp.: 40-60°C
104-140°F
Time: 2-3 min

US


TAP WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

DI WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min


DI WATER RINSE
Temp.: 20-40°C
69-104°F
Time: 2-3 min

HOT AIR DRYING


HYDROPHILIC FINISH



Hydrophobic surface

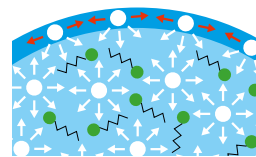

Reduction of the surface tension of water by **surfactants**



Hydrophilic finish

13/10/26

STORAGE CONDITIONS

- Keep the container hermetically sealed between 5°C and 40°C (41°F and 104°F) in a dry place.
- Always keep in packaging made from the same material as the original packaging (HDPE).



If you have any questions, please contact our Application Centre on: +41 22 365 46 66

NGL CLEANING TECHNOLOGY SA - PRECISION CLEANING SOLUTIONS

Chemin de la Vuarpillière 7 – CH-1260 NYON – SWITZERLAND
+41 22 365 46 66 – contact@ngl-group.com – www.ngl-group.com

SWISS QUALITY

