



GALVEX™

Universal liquid detergent for the removal of polishing pastes, soluble oils and light pollutions in ultrasonic processes.



LUXURY ACCESSORIES RANGE

FUNCTION	APPLICATION/POLLUTION
Ultrasonic cleaning. Interoperation, finishing, surface preparation. Prevents redeposition of dissolved copper.	Soluble oils, polishing pastes, tumbling residues, etc.

COMPATIBILITY

- Stainless steel
- Brass (leaded and unleaded)
- Zamak
- Rhodium, palladium
- ABS
- Aluminium
- Nickel silver
- Gold: white, pink, yellow

COMPONENTS

- Surfactants, chelating agents
- No phosphates

PHYSICO-CHEMICAL DATA

- pH concentrated: 9.8
- Density: 1.05
- Surface tension: 28.5 mN/m

INSTRUCTIONS FOR USE*

- Concentration: 2 to 5%
- Temperature: 50 to 70°C (122 to 158 °F)
- Time: 3 to 5 minutes


*Dependent on the quality of the water and the nature and quantity of contaminants.

PROCESS EXAMPLE

- Preparation prior to PVD

CLEANING

GALVEX™	GALVEX™	TAP WATER RINSE	DI WATER RINSE	DI WATER RINSE	HOT AIR DRYING
Tap water Conc.: 2-5% Temp.: 50-70°C 122-158°F Time: 3-5 min	Tap water Conc.: 2-5% Temp.: 50-70°C 122-158°F Time: 3-5 min	Temp.: 20-30°C 68-86°F Time: 3 min	Temp.: 20-30°C 68-86°F Time: 3-5 min	Temp.: 20-30°C 68-86°F Time: 3-5 min	
US	US		US		

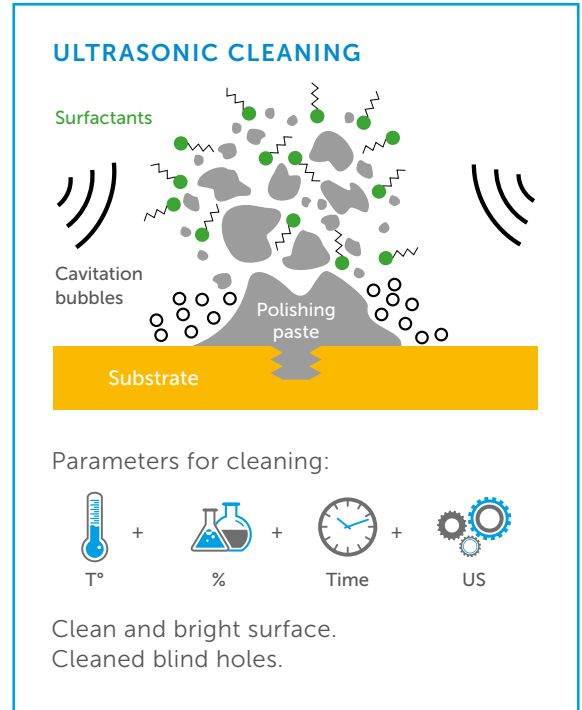

10/05/22

STORAGE CONDITIONS

- Keep the recipient hermetically sealed between 5°C and 40°C (41°F and 104°F) in a dry place.
- Always keep in packaging made from the same material as the original packaging (PEHD).



If you have any questions, please contact our Application Centre on: +41 22 365 46 66

