

SCHUTZLACK NGL 2002 ROSE

Masking varnish for protection of surfaces during mechanical operations (machining or satin finishing) or thermal (laser engraving operations, welding).



LUXURY ACCESSORIES RANGE

FUNCTION	APPLICATION/POLLUTION
Protection lacquer	N.A.

COMPATIBILITY

All metals

COMPONENTS

- Isopropanol, acetone
- Polymers, dye
- No CMR compound, REACH compliant

PHYSICOCHEMICAL DATA

Aerosol 400 ml

Not watersoluble

Colour: pink

■ Density: 0.8

• % sec: 5.3 - 6.0

■ Flash point: <21°C

INSTRUCTIONS FOR USE

- Spray the surface which needs protection from a distance 10-20 cm
- Leave the lacquer to dry for 5-10 min. depending on the amount spaved
- After use: turn the container and press the valve until only gas comes out
- Container is under pressure
- Do not spray against a flame or any source of ignition
- Do not pierce or burn even after use
- Do not smoke

PROCESS EXAMPLES

Schutzlack removal from stainless steel


CLEANING



• Schutzlack removal from copper alloys and sensitive steels

CLEANING



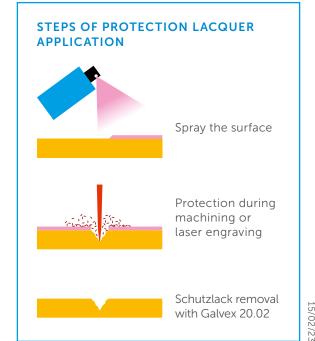

STORAGE CONDITIONS

- Protect from sunlight and do not expose to temperatures exceeding 50°C (122°F).
 Keep well away from all sources of ignition.
- The shelf life of the product is 24 months from the date of manufacture, under the appropriate storage conditions.



If you have any questions, please contact our Application Centre on: +41 22 365 46 66



